

Trimble

Uputstvo za povezivanje Trimble GNSS prijemnika na F BiH POS

- Pokrenite Trimble Access program na Vašem kontroleru

- Izaberite settings



- Izaberite Connect



- Izaberite GNSS kontakti



- Izaberite New



GNSS kontakt Setup, Strana 1:

- Izaberite ime za GNSS kontakt konfiguraciju
- Tip kontakta – internet Rover
- Izaberite mrežnu konekciju klikom na stelicu desno i izaberite Vašu konekciju
- Modem PIN ostavite prazno
- U APN sekciji upišite Vaš access point name koji zavisi od telecom provajdera



Access point Name (APN) setup:

- Odaberite svoju lokaciju
- Odaberite svoj paket – ovisno od telekom provajdera
- Izaberite accept za prihvatanje postavki



GNSS kontakt Setup, strana 2:

- Odaberite kvadratić za NTRIP
- Potvrdite da su kvadratići za sljedeće stavke prazni...
 - Use NTRIP v1.0
 - Use proxy server
 - Connect directly to Mountpoint
- Unesite FBIHPOS username
- Unesite FBIHPOS password



GNSS kontakt Setup, strana 3:

- IP Address: 195.222.35.158
- Set the IP Port: 8080
- Connection type GPRS
- Confirm the Send user identity info kvadratić nije odabran
- Pritisnite enter da spasite postavke



Postavke Vašeg stila mjerenja:

- Vratite se na meni Settings
- Izaberite Survey Styles



- Imenujte Vaš stil mjerenja



- Pređite na Rover options
- Izaberite Edit



Rover Options Setup:

Rover opcije, strana 1:

- Survey type : RTK
- Broadcast format : RTCM RTC
- Elevation mask : 10°
- PDOP mask : 6.0



*Napomena: Za različite mountpoint-e potrebno je odabrati različite broadcast formate!!

Rover opcije, strana 2:

- Izaberite odgovarajuću antenu
- Izaberite na koji dio antene se odnose mjerenja
- Visina antene
- Serijski broj



Rover opcije, strana 3:

- Izaberite GLONASS opcije
- Pritisnite accept da spasite postavke



- Izaberite Rover Radio



- Izaberite Edit

- Internet konekcija za ovaj tip



- Izaberite odgovarajući Internet kontakt

- Kada je odgovarajući GNSS kontakt izabran Izaberite Accept



- Izaberite Store da spasi postavke
- Pritisnite ESC da se vratite u Settings meni



- Izaberite General Survey pritiskom na Trimble ikonu



Napomena: Zato što koristite mrežno RTK nemojte birati Start Base Receiver...



- Izaberite željeni Mount point

Napomena: Stanice su poredane obzirom na udaljenost



Napomena: Kada imate RTK Fixed rješenje, spremni ste za mjerenje

