

# Trimble

**Uputstvo za povezivanje Trimble  
GNSS prijemnika na FBiHPOS**

- Pokrenite Trimble Access program na Vašem kontroleru



- Izaberite settings



- Izaberite Connect

- Izaberite GNSS kontakti



- Izaberite New
- GNSS kontakt Setup, Strana 1:



- Izaberite ime za GNSS kontakt konfiguraciju
- Tip kontakta – internet Rover
- Izaberite mrežnu konekciju klikom na stelicu desno i izaberite Vašu konekciju
- Modem PIN ostavite prazno
- U APN sekciji upišite Vaš access point name koji zavisi od telecom provajdera



#### Access point Name (APN) setup:

- Odaberite svoju lokaciju
- Odaberite svoj paket – ovisno od telekom provajdera
- Izaberite accept za prihvatanje postavki



#### GNSS kontakt Setup, strana 2:

- Odaberite kvadratid za NTRIP
- Potvrdite da su kvadratidi za sljedeće stavke prazni...
  - Use NTRIP v1.0
  - Use proxy server
  - Connect directly to Mountpoint
- Unesite FBIHPOS username
- Unesite FBIHPOS password



#### GNSS kontakt Setup, strana 3:

- Domena: fbihpos.katastar.ba
- Set the IP Port: 8080
- Connection type GPRS
- Confirm the Send user identity info kvadratid nije odabran
- Pritisnite enter da spasi postavke



Postavke Vašeg stila mjerenja:

- Vratite se na meni Settings
- Izaberite Survey Styles



- Imenujte Vaš stil mjerenja



- Pređite na Rover options
- Izaberite Edit



## Rover Options Setup:

### Rover opcije, strana 1:

- Survey type : RTK
- Broadcast format :RTCM RTK
- Elevation mask : 10°
- PDOP mask : 6.0



\*Napomena: Za različite mountpoint-e potrebno je odabrati različite broadcast formate!!

### Rover opcije, strana 2:

- Izaberite odgovarajuću antenu
- Izaberite na koji dio antene se odnose mjerenja
- Visina antene
- Serijski broj



### Rover opcije, strana 3:

- Izaberite GLONASS opcije
- Pritisnite accept da spasite postavke





- Izaberite Rover Radio



- Izaberite Edit

- Internet konekcija za ovaj tip



- Izaberite odgovarajući Internet kontakt

- Kada je odgovarajući GNSS kontakt izabran izaberite Accept



- Izaberite Store da spasi postavke
- Pritisnite ESC da se vratite u Settings meni



- Izaberite General Survey pritiskom na Trimble ikonu



Napomena: Zato što koristite mrežno RTK nemojte birati Start Base Receiver...





- Izaberite željeni Mount point

Napomena: Stanice su poredane obzirom na udaljenost



Napomena: Kada imate RTK Fixed rješenje, spremni ste za mjerenje

